BALANCES & TEST SERVICE 2023

HANGING SCALES/CRANE SCALES

Hanging scale KERN HCN



Robust, compact hanging scale with high level of protection against dust and water spray

Features

- With the TÜV certification mark, the scale meets the requirements of the standard EN 13155 (Non-fixed load lifting attachments/ Breakage resistance) and EN 61010-1 (Electrical safety)
- Housing Stainless steel, IP65-protected against dust and water splashes
- Ideal for rapid control in goods-in and goods-out
- Also essential in the private sector to determine the weight of fish, game, fruits, bicycle parts, suitcases etc.
- Hold function: For easy reading of the weighing result, the display can be "frozen" in different ways. Either automatically when the weighing value remains unchanged or manually by pressing the Hold key
- Peak load display (peak hold)
- Internal measuring frequency: 5 Hz
- Snap link (stainless steel) with safety catch
 as standard
- · Hook (stainless steel) as standard

Technical data

- LCD display, digit height 12 mm
- Hole diameter of load support ca. 14 mm
- ${\boldsymbol{\cdot}}$ ${\boldsymbol{\boxtimes}}$ Second display on the back of the balance
- Ready for use: Batteries included, 2×1.5 V AA, operating time up to 200 h $\,$

Accessories

- Snap link (stainless steel) with safety catch, opening approx. 15 mm, KERN HCB-A01
- Hook (stainless steel), opening approx.
 25 mm, KERN HCB-A02

STANDARD								
	C	^	666				DAkkS	
CAL EXT	UNIT	MOVE	IP 65	BATT	DMS	1 DAY	+3 DAYS	

Model	Weighing capacity	Readability	Dimensions housing W×D×H	Net weight	Option DAkkS Calibr. Certificate
KERN	[Max] kg	[d] g	mm	approx. kg	DAkkS KERN
HCN 50K100IP	50	100	96×48×179	0,85	963-128H
HCN 100K200IP	100	200	96×48×179	0,50	963-129H
HCN 200K500IP	200	500	96×48×179	0,50	963-129H

KERN & SOHN GmbH · Ziegelei 1 · 72336 Balingen · Germany · Tel. +49 7433 9933-0 · www.kern-sohn.com · info@kern-sohn.com







BALANCES & TEST SERVICE 2023

KERN PICTOGRAMS





Internal adjusting:

Quick setting up of the balance's accuracy with internal adjusting weight (motordriven)



Adjusting program CAL:

For quick setting up of the balance's accuracy. External adjusting weight required



Easy Touch:

Suitable for the connection, data transmission and control through PC or tablet.



Memory:

Balance memory capacity, e.g. for article data, weighing data, tare weights, PLU etc.



Alibi memory:

Secure, electronic archiving of weighing results, complying with the 2014/31/EU standard.



• 888. •

RS 232

• 1998. •

RS 485

KERN Universal Port (KUP):

allows the connection of external KUP PCS interface adapters, e.g. RS-232, RS-485, SB, Bluetooth, WLAN, Analogue, Ethernet etc. for the exchange of data and control commands, without installation effort

Data interface RS-232:

To connect the balance to a printer, PC or network



To connect the balance to a printer, PC or other peripherals. Suitable for data transfer over large distances. Network in bus topology is possible


USB data interface:

To connect the balance to a printer, PC or other peripherals



USB

Bluetooth* data interface:

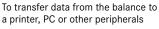



WiFi data interface:

To transfer data from the balance to a printer, PC or other peripherals

Control outputs _0^0_ SWITCH

(optocoupler, digital I/O): To connect relays, signal lamps, valves, etc.



Analogue interface:

to connect a suitable peripheral device for analogue processing of the measurements



Interface for second balance:

license. Other trademarks and trade names are those of their respective owner


For direct connection of a second balance



KCP

Network interface: For connecting the scale to an


Ethernet network

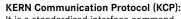

It is a standardized interface command PROTOCOL set for KERN balances and other instruments, which allows retrieving and controlling all relevant parameters and functions of the device. KERN devices featuring KCP are thus easily integrated with computers, industrial controllers and other digital systems





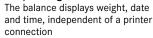

GLP/ISO log: GLP

With weight, date and time. Only with KERN printers.



PRINTER

Reference quantities selectable. Display can be switched from piece to weight

Recipe level A:


The weights of the recipe ingredients can be added together and the total weight of the recipe can be printed out



Internal memory for complete recipes RECIPE with name and target value of the recipe ingredients. User guidance through display



Totalising level A:

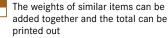

Determining the deviation in % from

Percentage determination:

the target value (100 %)

%


B

Weighing units: Can be switched to e.g. nonmetric UNIT units. See balance model. Please refer to KERN's website for more details



Weighing with tolerance range: (Checkweighing) Upper and lower limiting can be programmed individually, e.g. for sorting and dosing. The process is supported by an audible or visual signal, see the relevant model

Hold function:

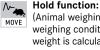

(Animal weighing program) When the weighing conditions are unstable, a stable weight is calculated as an average value



KERN & SOHN GmbH · Ziegelei 1 · 72336 Balingen · Germany · Tel. +49 7433 9933-0 · www.kern-sohn.com · info@kern-sohn.com

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KERN & SOHN GmbH is under

Protection against dust and water splashes IPxx:

The type of protection is shown in the pictogram.

Suspended weighing: Load support with hook on the UNDER

Battery operation:

underside of the balance

Ready for battery operation. The battery BATT type is specified for each device



Rechargeable battery pack: Rechargeable set



Universal plug-in power supply: with universal input and optional input socket adapters for A) EU, CH, GB

B) EU, CH, GB, USA C) EU, CH, GB, USA, AUS

Plug-in power supply:

230V/50Hz in standard version for EU, CH. 230 V On request GB, USA or AUS version available



Integrated power supply unit: Integrated in balance. 230V/50Hz standard EU. More standards e.g.

GB, USA or AUS on request



Weighing principle: Strain gauges Electrical resistor on an elastic deforming body



Weighing principle: Tuning fork A resonating body is electromagnetically excited, causing it to oscillate



Weighing principle: Electromagnetic force compensation

Coil inside a permanent magnet. For the most accurate weighings




Weighing principle: Single cell technology:

Advanced version of the force compensation principle with the highest level of precision




Verification possible:

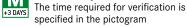

Factory calibration (ISO):

Package shipment:

Pallet shipment:

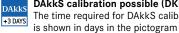

ISO

1 DAY

2 DAYS

DAkkS calibration possible (DKD): The time required for DAkkS calibration

The time required for Factory calibration

The time required for internal shipping prepa-

The time required for internal shipping prepa-

rations is shown in days in the pictogram

rations is shown in days in the pictogram

is shown in days in the pictogram